

CandyShell® CARD

Card Storage Instructions

① To insert a card, line it up with the built-in card slot and gently slide it through. CandyShell Card securely fits up to 3 cards.



② To remove, use your thumb to push your cards back out from the exposed thumb-release corner. Then simply pull cards free with your fingers.



(*) **speck**®

Case Removal Instructions

① With your iPhone turned upside down, rest the top of your phone against a smooth surface and press your thumbs against the top sections of the back of the case.



② Gently flex the corner of your CandyShell Card back off of one of the bottom corners of your iPhone, then the other.



③ Once you have two corners of your phone free, the rest will angle out easily.



To learn more about CandyShell Card and check out more seriously fun stuff, visit speckproducts.com