

# Removal Instructions

① Start with the top left corner near the buttons cutout. Gently pull the top frame away from the bottom of the case.

② If you need to, use a credit card or guitar pick to wedge in between the screen and top frame.

③ Once you've created a gap between the top frame and the bottom case, work around the case, un-snapping as you go until the two pieces are completely separated.

For more info, and lots more cases fit to your gadgets and your style, visit [speckproducts.com](http://speckproducts.com)



(\*) **speck**