


- ① Place your iPhone inside the back shell of your case.

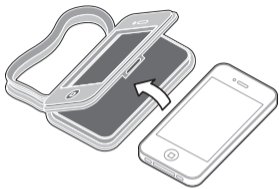

- ② Fit the front frame over the face of your iPhone.




- ③ Wrap the outer rubber ring into place around the sides of the case.



- ④ Fit the ring over the side lock and press into place with your thumbs.



- ⑤ To remove, pull back the rubber ring and lift up the side lock.

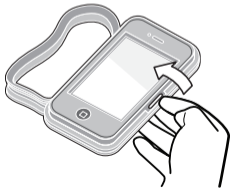

Flip open rubber flaps to access headphone jack, mute switch, and 30-pin docking connector.



(*) **speck**

For more info, and lots more cases fit to your gadgets and your style, visit speckproducts.com